





Bulkhead Instructions

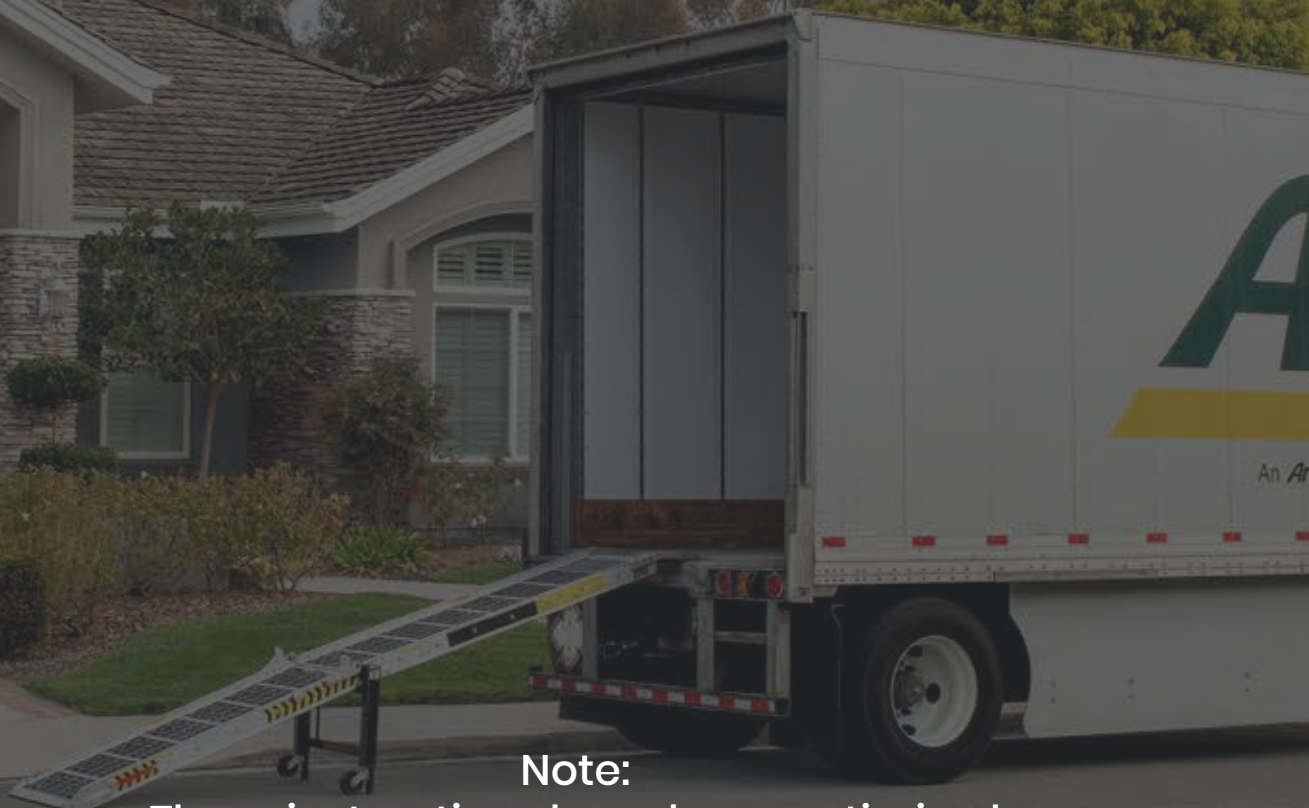

Note:

These instructions have been optimized for digital devices. Please consider the environment before printing.


Bulkhead Installation Instructions

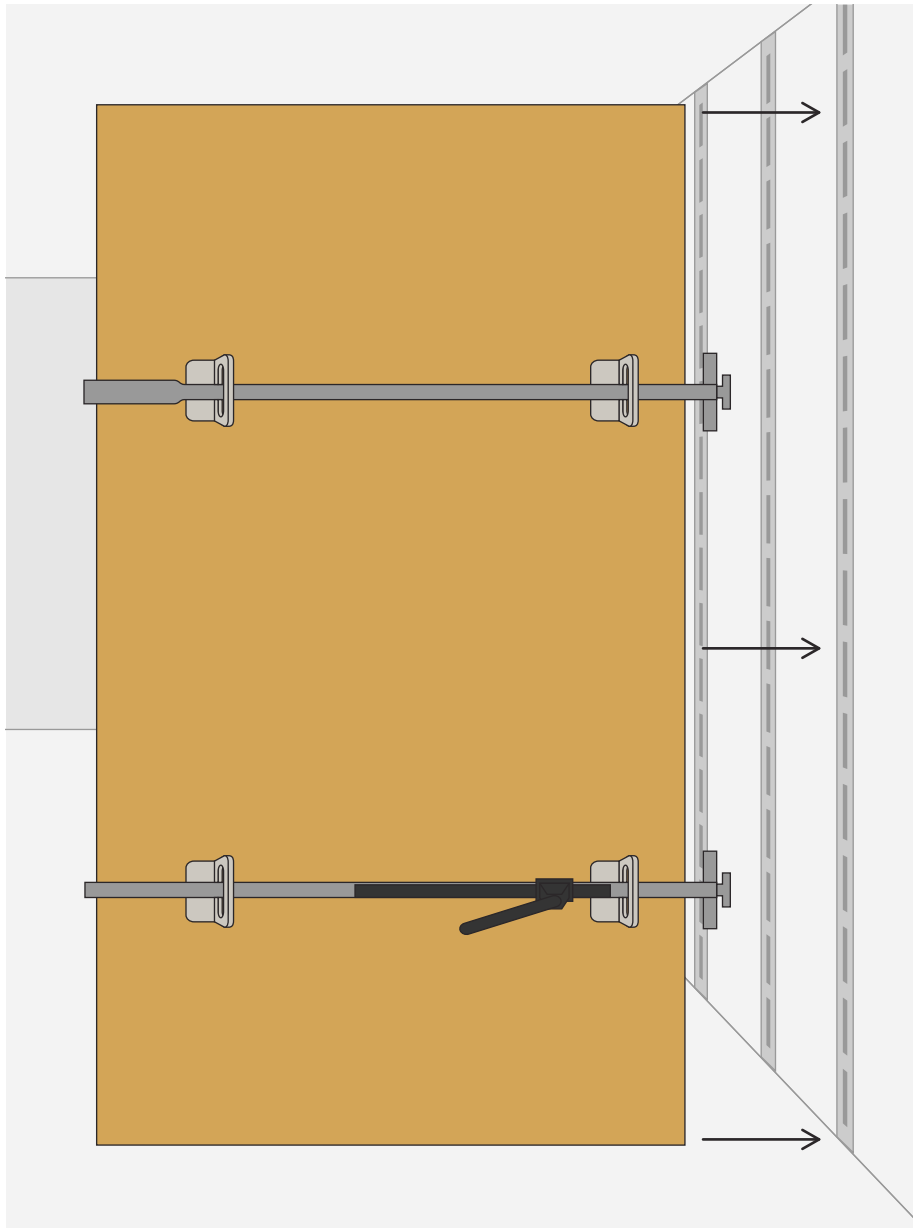

Step 1

Align first bulkhead panel with vertical trailer post


Bulkhead Installation Instructions

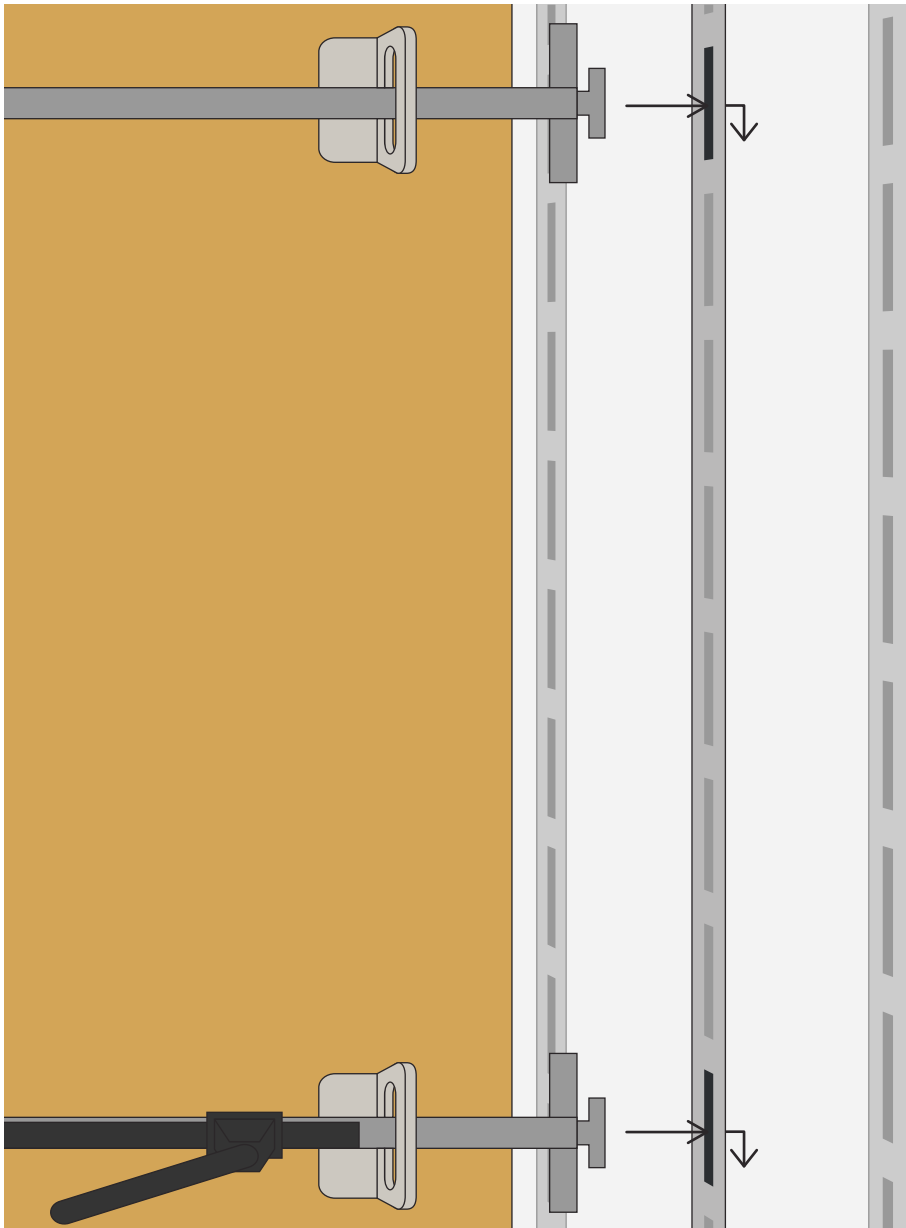

Step 2

Firmly press T-shaped load bar ends down into vertical trailer post slots


Bulkhead Installation Instructions

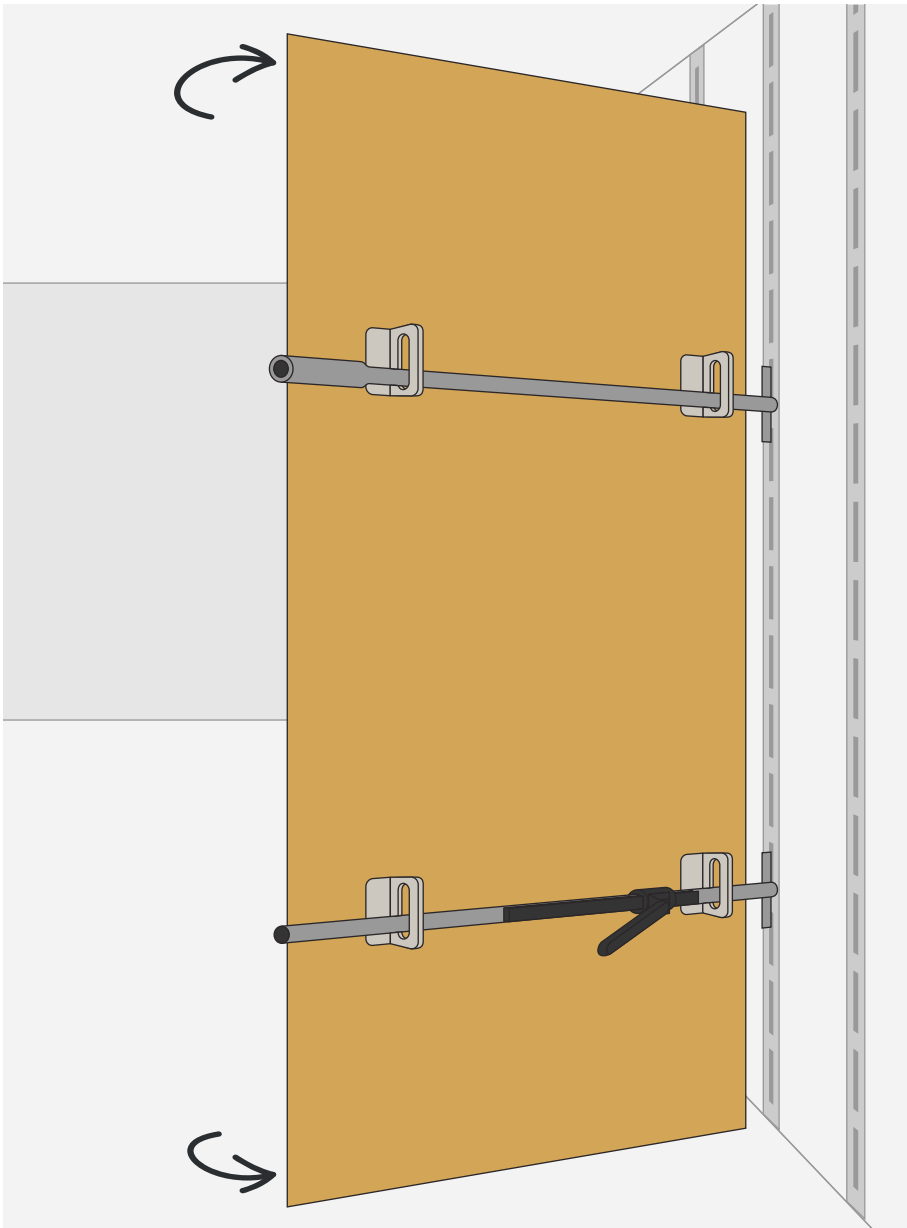

Step 3

Pull bulkhead panel away from your shipment at a slight angle


Bulkhead Installation Instructions

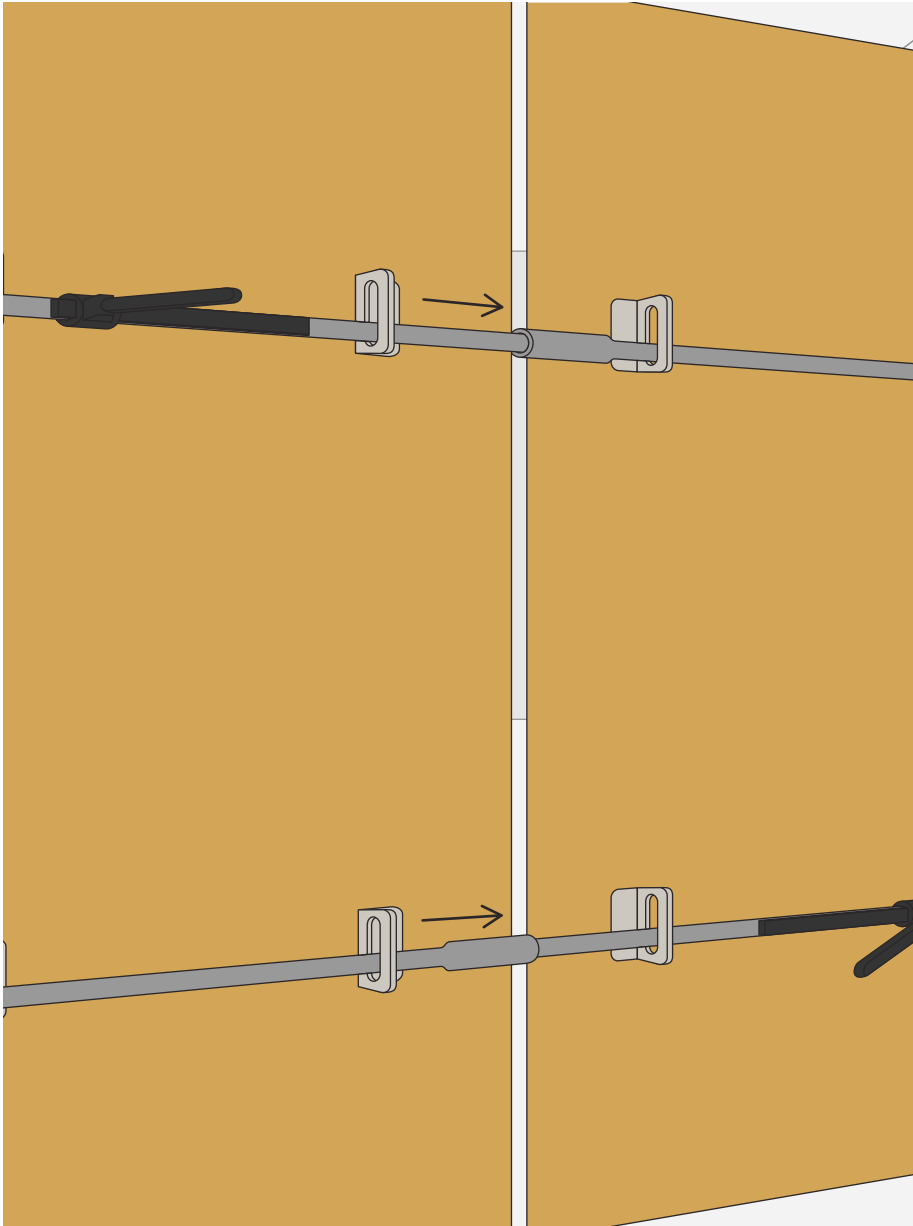

Step 4

With handles open, slide load bars together until pinholes align


Bulkhead Installation Instructions

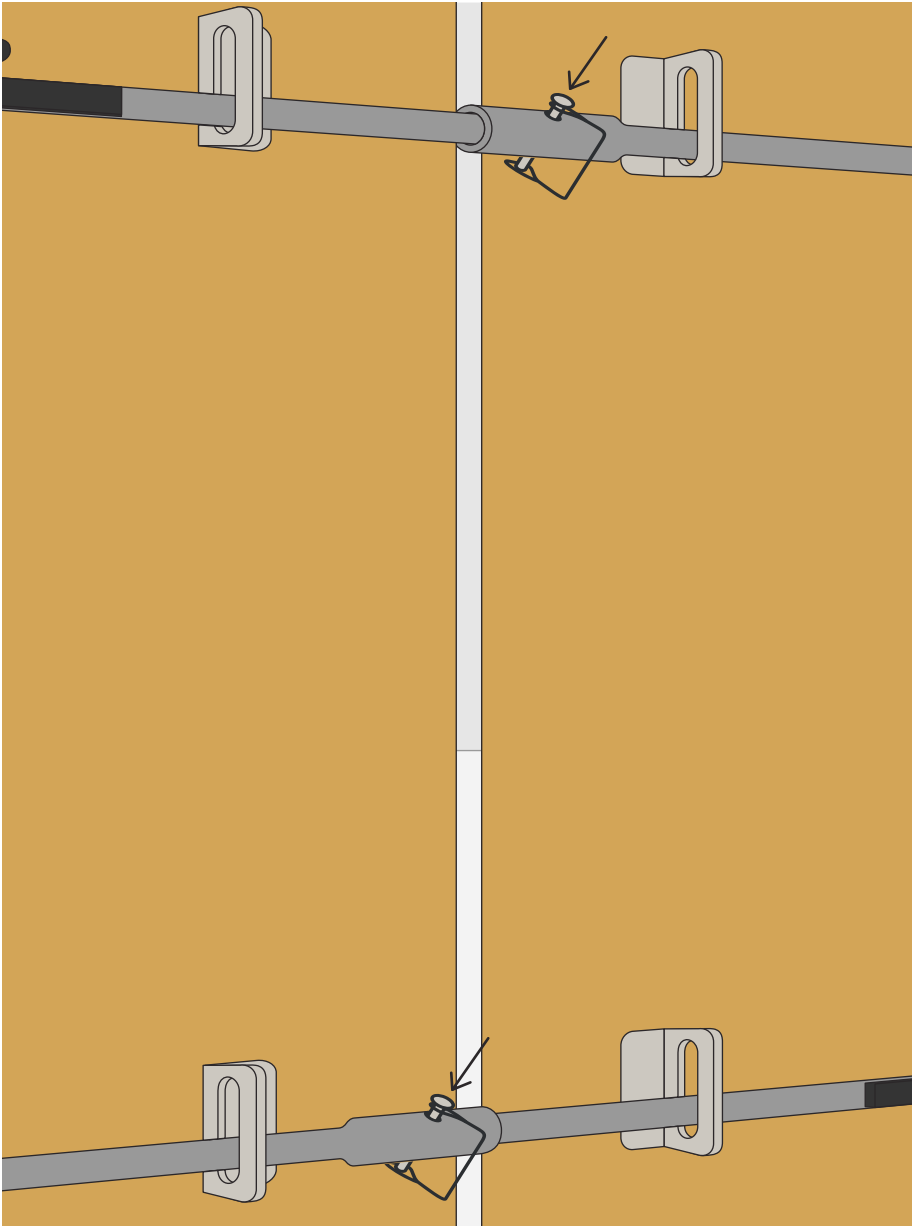

Step 5

Insert locking pin through
each load bar


Bulkhead Installation Instructions

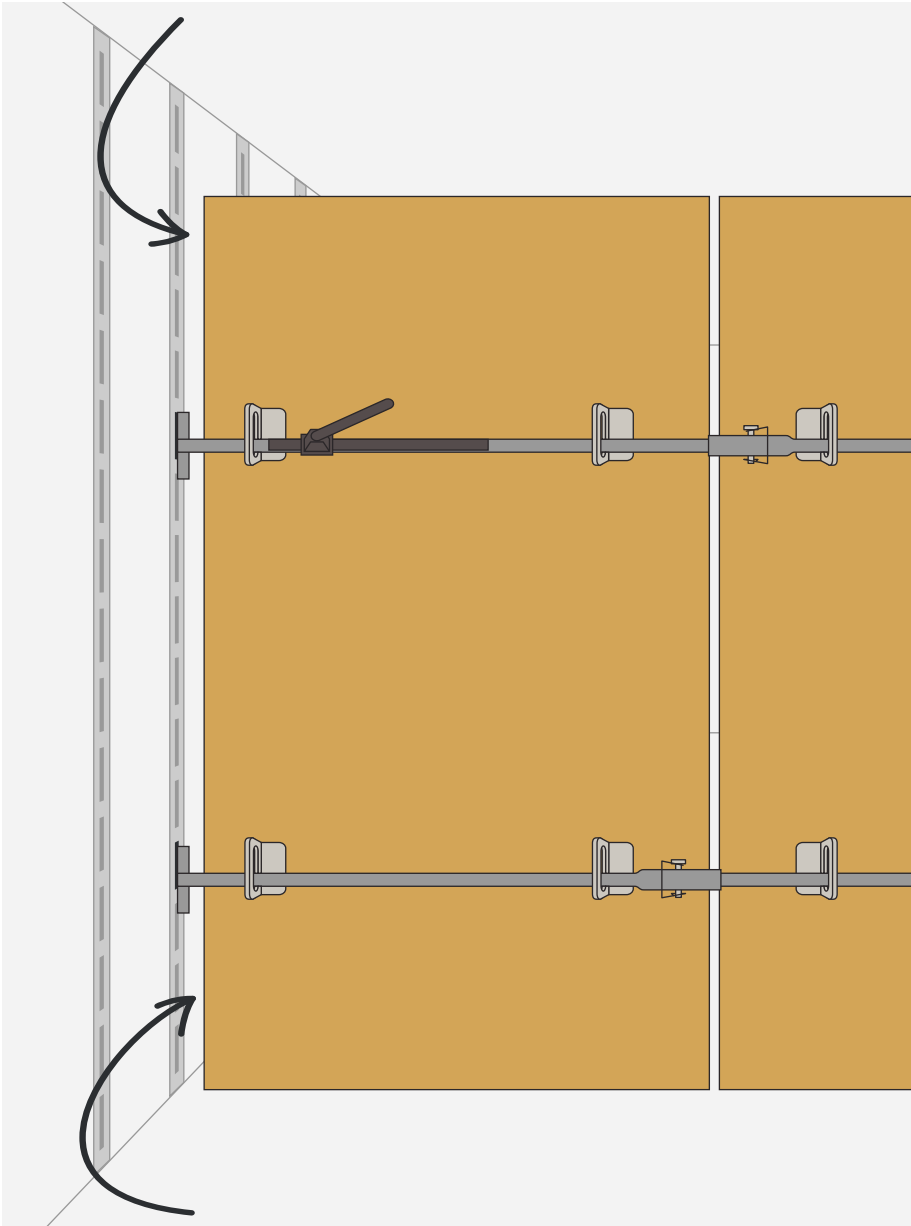

Step 6

Slide bulkhead toward shipment & repeat Step 2


Bulkhead Installation Instructions

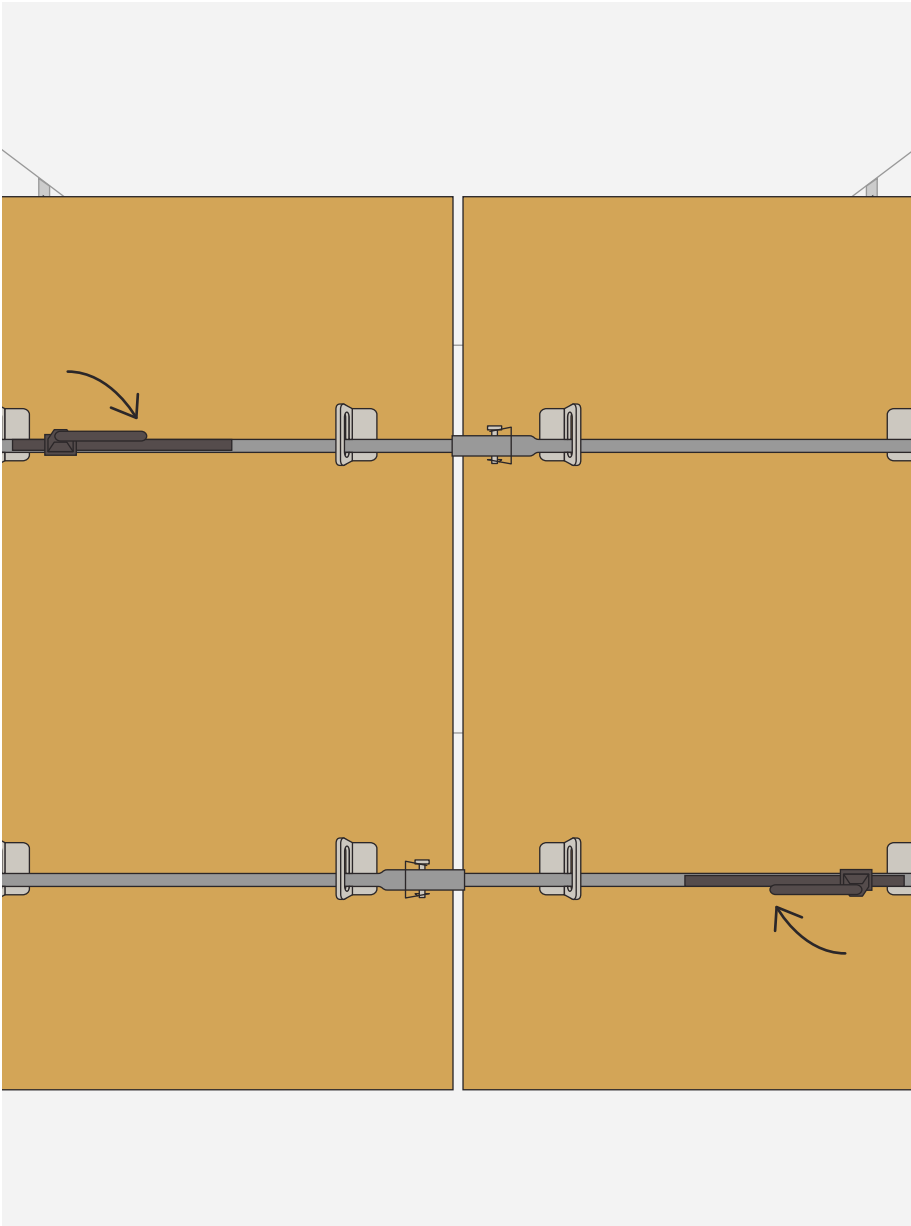

Step 7

Close load bar handles with
an open palm

Bulkhead Installation Instructions

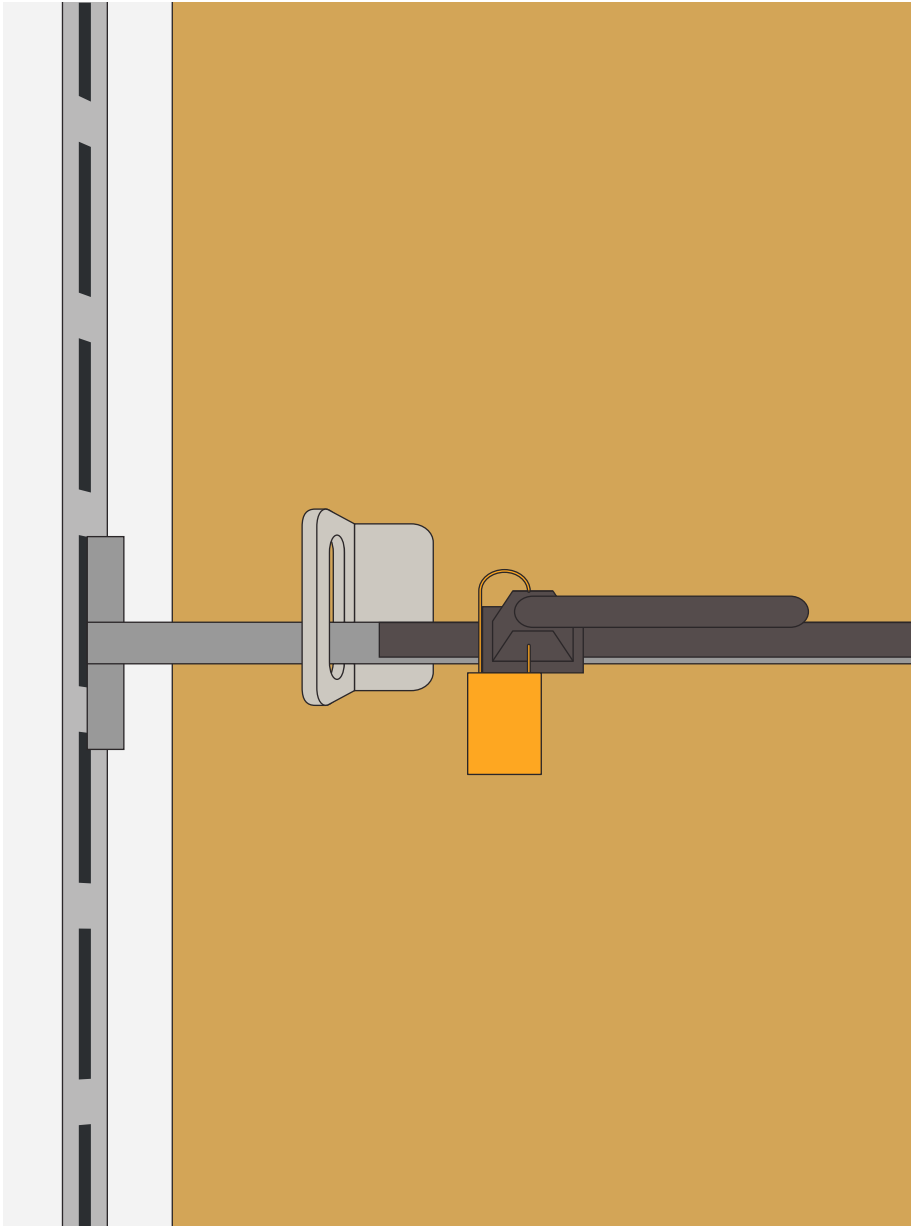

Step 8

Place a lock in each handle
to secure bulkhead