


Loading Ramp Setup & Removal Instructions

Note:


These instructions have been optimized for digital devices. Please consider the environment before printing.

Loading Ramp Setup Instructions

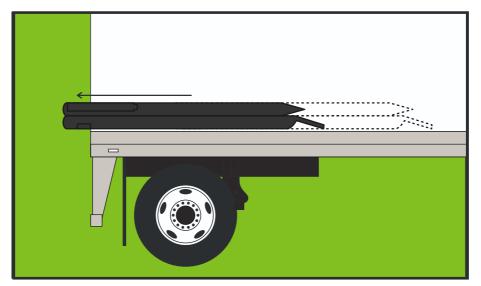

Step 1


Slide ramp towards you until leg assembly is clear of the trailer

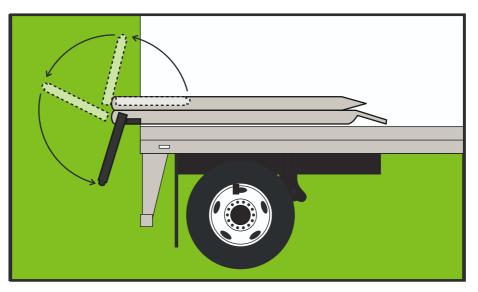

Step 2


Unfold leg assembly until legs rest against stop blocks and lock into leg assembly

Loading Ramp Setup Instructions

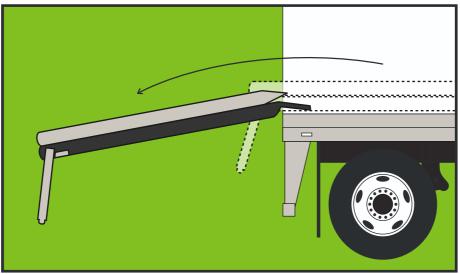

Step 3


Slide ramp toward you until apron rests flat on trailer floor

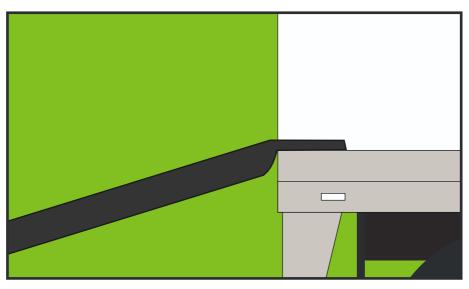


Step 4

Ensure rail ends are touching end of trailer and entire apron is inside trailer

Loading Ramp Setup Instructions

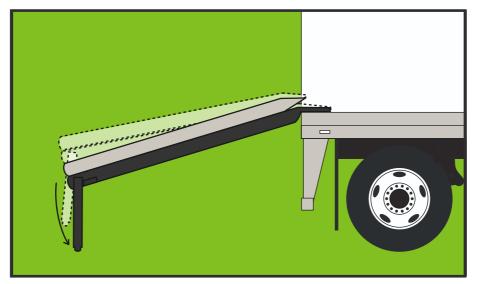


Step 5 Place legs on firmly on ground

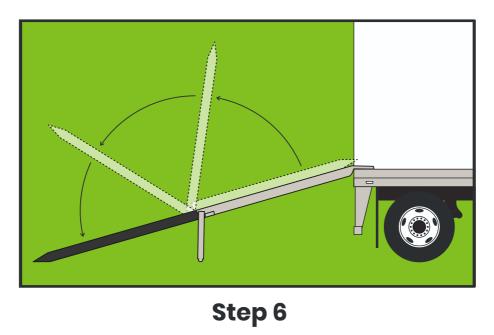


Unfold ramp, resting it on ground

Loading Ramp Removal Instructions

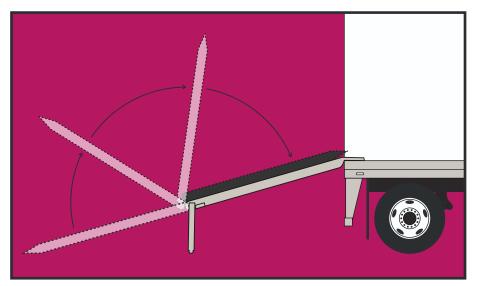


Step 1

Fold the bottom portion of the ramp until it rests on the top half of the ramp.

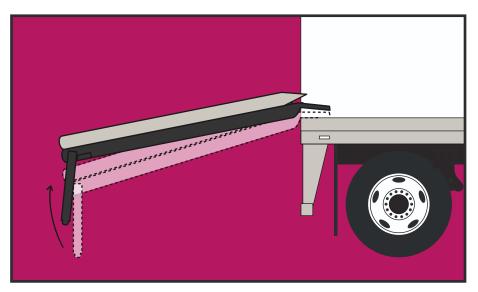


Step 2 Lift the ramp off of the ground

Loading Ramp Removal Instructions

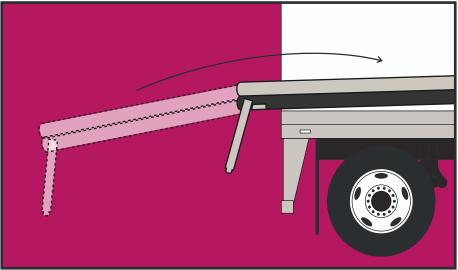


Step 3

Slide ramp into trailer until apron rests flat on trailer floor

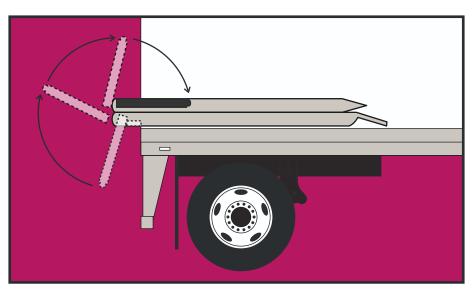

Step 4

Raise yellow bar to unlock leg assembly. Fold leg assembly. Slide rest of ramp into trailer.

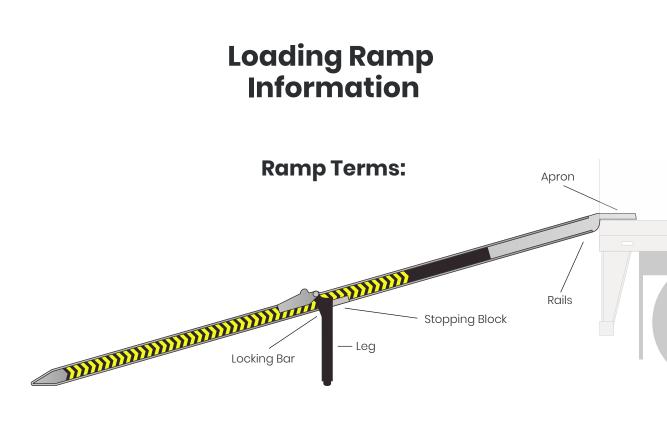

Improper vs. Proper Usage:





Ramp Placement Reminder:

The ramp must NEVER be packed behind the bulkhead with your personal belongings and should be the last item loaded on the trailer.