




We Drive. You Save.®

Ramp Setup Instructions:




Position the ramp on the trailer as shown and unfold the leg assembly.

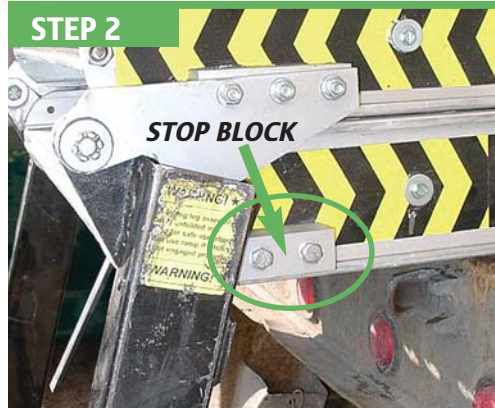

Ensure the legs rest against the **STOP BLOCKS**.



Slide the ramp backward until the apron rests flat on the trailer floor. Place the legs on the ground.

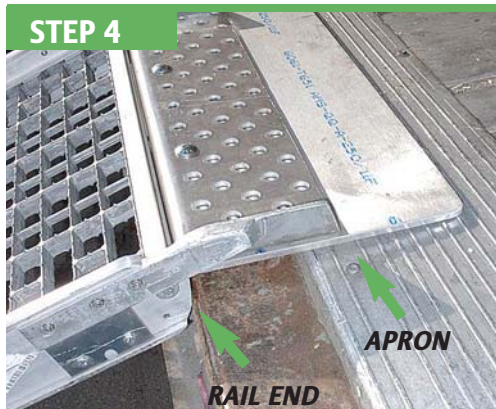

Ensure the **RAIL ENDS** are touching the rear of the trailer and the entire **APRON** is inside the trailer.



Unfold the bottom portion of the ramp until it rests on the ground. Ensure the **YELLOW BAR** locks into leg assembly. The ramp should be used only on a flat, firm surface.

The ramp should be ready for use if these steps are followed.



800-355-1696

www.upack.com/ramp.asp



We Drive. You Save.®

Ramp Return Instructions:

STEP 1



LEG ASSEMBLY

Fold up the bottom portion of the ramp until it rests on the top half of the ramp. Raise the **YELLOW BAR** to unlock leg assembly.

STEP 2



Lift the apron off the trailer floor and scoot the ramp forward a few inches.

STEP 3



Standing behind the ramp, lift and slide the ramp forward into the trailer.

STEP 4



Ramp should rest flush on the trailer floor.

STEP 5



Fold the leg assembly up. Push the ramp into the trailer and close the trailer doors.

Always position yourself uphill from the 2-wheeler.



800-355-1696

www.upack.com/ramp.asp