




We Drive. You Save.®

# Ramp Setup Instructions:




Position the ramp on the trailer as shown and unfold the leg assembly.

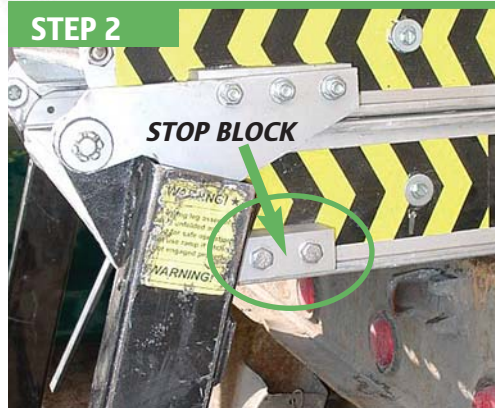

Ensure the legs rest against the **STOP BLOCKS**.



Slide the ramp backward until the apron rests flat on the trailer floor. Place the legs on the ground.

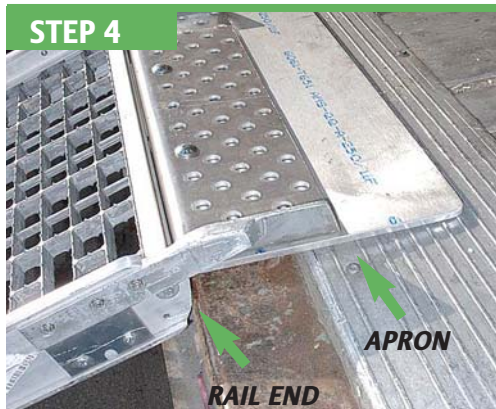

Ensure the **RAIL ENDS** are touching the rear of the trailer and the entire **APRON** is inside the trailer.




Unfold the bottom portion of the ramp until it rests on the ground. Ensure the **YELLOW BAR** locks into leg assembly. The ramp should be used only on a flat, firm surface.

*The ramp should be ready for use if these steps are followed.*



800-355-1696

[www.upack.com/ramp.asp](http://www.upack.com/ramp.asp)

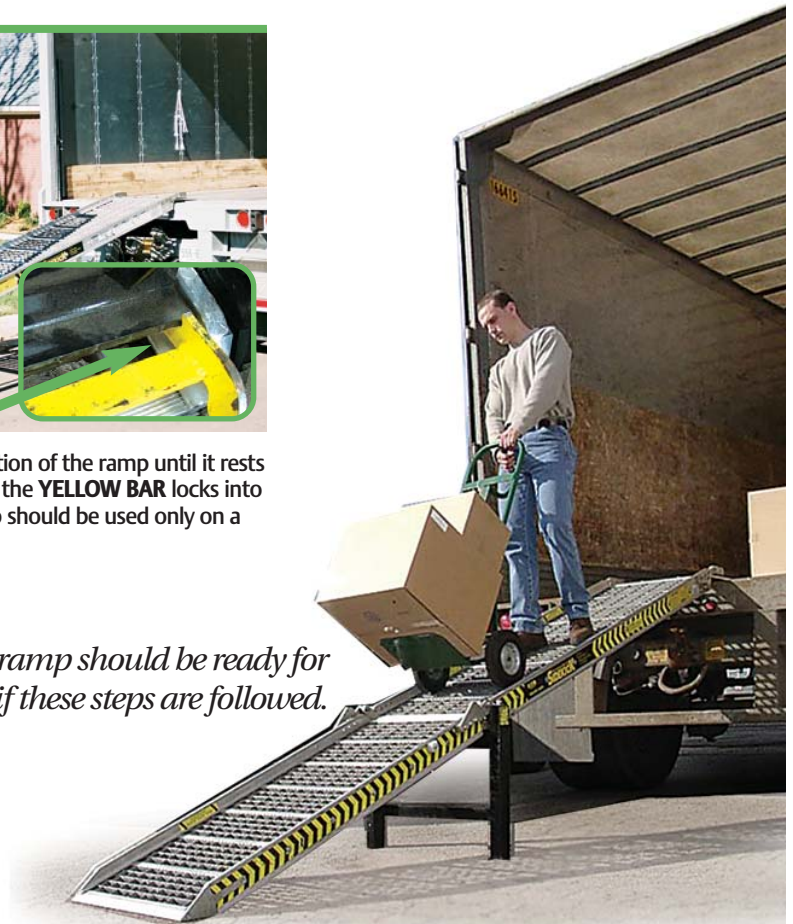



We Drive. You Save.®

# Ramp Return Instructions:

## STEP 1



LEG ASSEMBLY

Fold up the bottom portion of the ramp until it rests on the top half of the ramp. Raise the **YELLOW BAR** to unlock leg assembly.

## STEP 2



Lift the apron off the trailer floor and scoot the ramp forward a few inches.

## STEP 3



Standing behind the ramp, lift and slide the ramp forward into the trailer.

## STEP 4



Ramp should rest flush on the trailer floor.

## STEP 5



Fold the leg assembly up. Push the ramp into the trailer and close the trailer doors.

*Always position yourself uphill from the 2-wheeler.*



800-355-1696

[www.upack.com/ramp.asp](http://www.upack.com/ramp.asp)